


Quick-Clamp Rack

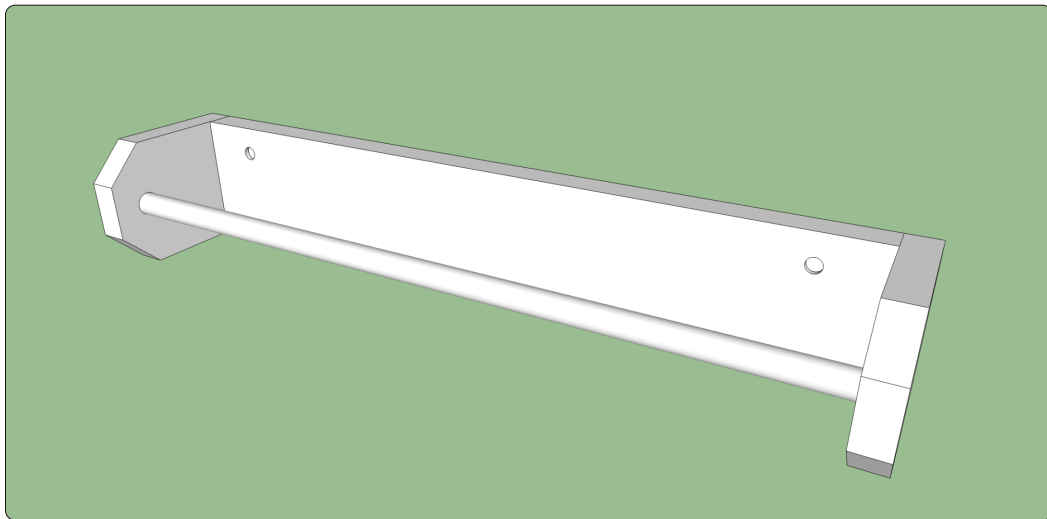

- 3/4" x 29" x 3-1/2" MDF
- 5/8" x 20" Hardwood Dowel
- 2" Screws or Nails
- Titebond I Wood Glue

Directions

Cut back and sides to length and width at the table saw. Cut bevels from front edges of sides using a band saw or jigsaw. Mark and drill a 1/2" dowel hole into sides using a Forstner

bit. To assemble, apply glue to the side edges of the back and attach sides with 2" nails or predrilled screws.

For additional details please see this project's article and video on our website:

<https://AroundHomeDIY.com>

Cutting Diagram

